

Engine Relay Box			
Relay Number	Details	Loads	Schematic
RL1	20A 1 Contact BLACK	Double Relay	
RL3	20A 1 Contact GRAY		
RL4	20A 1 Contact BLACK	FRONT FOG LAMP	
RL5	20A 1 Contact BLACK	HORN	
RL6	20A 1 Contact BLACK	FAN LOW SPEED	
RL11	10A 2 Contact GRAY	CLUTCH COMPRESSOR	

Engine Relay Box			
Relay Number	Details	Loads	Schematic
RL12	20A 1 Contact BLACK	FAN HIGH SPEED	<p style="text-align: center;">RL12</p>
RL13	20A 2 Contact BLACK	PARALLEL SUPPLIERS RELAY	<p style="text-align: center;">RL13</p>

Interior Relay Box(1AIRBAG)			
Relay Number	Details	Loads	Schematic
RELAY1 (8048)	35A 1 Contact BROWN	Blower Heater	
RELAY2 (8616)	20A 1 Contact GRAY	Motion & Shock Sensor	
RELAY3 (8116)	35A 1 Contact BROWN	ECO Mode	
RELAY4 (8116)	20A 1 Contact GREEN	Mirrors and Rear Screen Heater	
RELAY5 (5005)	20A 2 Contact GRAY	Wiper	

Interior Relay Box(2AIRBAG)			
Relay Number	Details	Loads	Schematic
RELAY1 (8048)	35A 1 Contact BROWN	Blower Heater	
RELAY2 (5005)	20A 1 Contact GRAY	Wiper	
RELAY3	35A 1 Contact BROWN	ECO Mode	
RELAY4 (8116)	20A 1 Contact GREEN	Mirrors and Rear Screen Heater	
RELAY7 (6125)	35A 1 Contac BROWN	Rear Window Winder	

Interior Relay Box(2AIRBAG)			
Relay Number	Details	Loads	Schematic
RELAY8 (6020)	35A 1 Contact BROWN	Front Window Winder	
RELAY9 (6233)	20A 1 Contact GRAY	Turnk	
RELAY10 (6236A)	20A 2 Contact GRAY	Master Unlock	
RELAY11 (6236B)	20A 2 Contact GRAY	Master Lock	

فروشگاه اینترنتی ایسیو بانک

WWW.ECU-BANK.COM